

AT-8600 Series Switch Hardware Reference



AT-8624T/2M
AT-8624PoE
AT-8648T/2SP

AT-8600 Series Hardware Reference
Document Number C613-03080-00 REV G

© 2006-2008 Allied Telesis Inc. All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis Inc.

Allied Telesis Inc. reserves the right to change specifications and other information in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis Inc. has been advised of, known, or should have known, the possibility of such damages.

All company names, logos, and product designs that are trademarks or registered trademarks are the property of their respective owners.

Contents

Models Covered by this Document	4
Hardware Description	4
Switch Overview	4
AT-8624T/2M Model	6
AT-8624PoE Model	6
AT-8648T/2SP Model	6
Implementing PoE	7
LEDs	7
Expansion Options	11
Switch Start-Up	12
Ports	15
RS-232 Terminal Port (ASYNO)	15
RJ-45 Ports	16
Redundant Power Supply (RPS)	17
Cables	19
Terminal and Modem Cables	19
Cable Guidelines	21
Using AT-TFTP Server	21
Using Windows Terminal and Hyperterminal	22
Test Facility	25
10/100 Ethernet LAN Port Tests	26
Testing Switch Interfaces	27
Troubleshooting	27
Common Problems and Solutions	28
For More Information	29

Models Covered by this Document

This Hardware Reference includes information on the following models:

- AT-8624T/2M 24-port 10BASE-T/100BASE-TX
- AT-8624PoE
- AT-8648T/2SP 48-port 10BASE-T/100BASE-TX

The latest Hardware Reference can be found at www.alliedtelesis.com/support/software.

Hardware Description

This section provides an overview of the hardware features for AT-8600 Series switches. Hardware descriptions for expansion modules are in the *Expansion Modules Installation Guide*. These references can be found on the CD-ROM provided with your switch, or can be downloaded from www.alliedtelesis.com/support/software.

Switch Overview

RJ-45 copper ports ensure industry-standard compatibility, while two expansion module bays add configuration flexibility.

- | | |
|---------------------------------|--|
| Dimensions | <ul style="list-style-type: none"> ■ Height = 44 mm (plus 5.5 mm if the rubber feet are used) ■ Width = 440 mm (excluding rack-mounting brackets) ■ Depth: <ul style="list-style-type: none"> • AT-8624T/2M = 223mm • AT-8624PoE = 408mm • AT-8648T/2SP = 254mm ■ Weight = not more than 7 kg (excluding power cord and expansion modules) |
| Mounting system | <ul style="list-style-type: none"> ■ 1 RU 19-inch rack mounting |
| Environmental conditions | <ul style="list-style-type: none"> ■ Operating temperature range: 0 to 40° C (32 to 104° F) ■ Storage temperature range: -25 to 70° C (-13 to 158° F) ■ Operating humidity range: 5% to 80% non-condensing ■ Storage humidity range: 5 to 95% non-condensing |
| Regulatory standards | <ul style="list-style-type: none"> ■ EMC: EN55022, AS/NZS CISPR22 class A, FCC CFR47 Part 15 Class A, and VCCI Class A ■ Immunity testing to EN55024 ■ Flicker and Harmonics testing to EN61000-3-2 and EN61000-3-3 ■ Safety: UL60950-1, CAN/CSA-C22.2 No. 60950-1-03, EN60950-1, EN60825-1 |
| LEDs | <ul style="list-style-type: none"> ■ Ethernet port and System status LEDs ■ Mode button ■ For a complete list of LEDs and their functions, see “LEDs” on page 7. |

- Power Supply Unit**
- Universal 100/240 VAC 50/60 Hz input
 - Redundant DC Power connection

- Switching core**
- Advanced ASIC switch chip
 - Wire-speed L2 and L3 IP Switching

- Processing core**
- 200 MHz CPU
 - 16 MBytes RAM
 - 8 MBytes flash memory

- Asynchronous serial port**
- Up to 115 kbps
 - Standard DB9 female RS-232 connector

- Expansion module bays**
- Expansion module bays are included on the AT-8624T/2M and AT-8624PoE switches.
- 2 bays for expansion modules
 - Support for gigabit Ethernet expansion modules

AT-8624T/2M Model

- 24-port 10BASE-T/100BASE-TX (RJ-45 connectors)
- Two expansion module bays
- Auto-negotiating advanced fast Ethernet switch

Figure 1: AT-8624T/2M front and rear panels



AT-8624PoE Model

- 24-port 10BASE-T/100BASE-TX (RJ-45 connectors)
- Two expansion module bays
- Auto-negotiating advanced fast Ethernet switch


Figure 2: AT-8624TPoE front and rear panels



AT-8648T/2SP Model

- 48-port 10BASE-T/100BASE-TX (RJ-45 connectors)
- Two Gigabit uplink ports, SFP or copper
- Auto-negotiating advanced fast Ethernet switch

Figure 3: AT-8648T/2SP front and rear panels

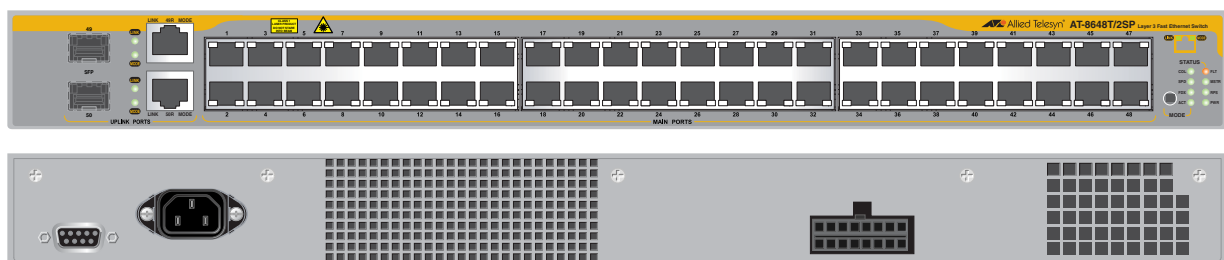

Implementing PoE

The IEEE 802.3af standard, which is the IEEE standard for PoE, describes two methods for implementing PoE over twisted pair cabling. One method uses the same strands that carry the network traffic and the other the spare strands.

The PoE implementation on the AT-8624PoE switch transmits power over the same strands that carry the network traffic (strands 1, 2, 3 and 6). The power transfer does not interfere with the network traffic. The power and the network traffic can coexist on the same strands simultaneously.

Powered devices that comply with the IEEE 802.3af standard support both methods of power delivery. As long as a powered device is compliant with the standard, it should be able to receive its power from the switch.

LEDs

The following tables outline how the switch and expansion modules report faults and operational activities. Expansion modules are optional and can be purchased separately. Contact an authorised Allied Telesis distributor or reseller, or visit www.alliedtelesis.com for more information on expansion modules.

System LEDs

LED	State	Description
FAULT	Off	Switch operation is normal.
	Red	The switch or management software is malfunctioning.
	1 flash	A switch fan has failed.
	3 flashes	The main PSU has failed and the RPS is now providing power.
	4 flashes	The RPS Monitor is set to ON, and the RPS is not functioning, either because it has failed or has been switched off.
	5 flashes	The RPS Monitor is set to ON, but the RPS is not connected.
	7 flashes	For the AT-8624T/2M and AT-8624PoE switches: An expansion module has been inserted or removed while the switch is powered on.
MASTER	Off	This LED is not supported.
RPS	Green	An optional redundant power supply is connected to the switch.
	OFF	There is no optional redundant power supply connected to the switch.
PWR	Green	The switch is receiving power and the voltage is within the acceptable range.
	Off	The switch is not receiving power.

Use the Mode Select button to toggle the Mode LEDs to the desired state. Toggling the Mode Selection button does not affect the normal switch operations.

AT-8624T/2M switch Link and Mode LEDs

LED	State	Description
LINK	OFF	There is no link between the port and the end-node.
	Green	A valid link has been established between the port and the end-node.
Mode - COL	OFF	No data collisions are occurring on the port.
	Flashing Green	Data collisions are occurring on the port.
Mode - 100	OFF	The port is operating at 10 Mbps.
	Green	The port is operating at 100 Mbps.
Mode - FULL	OFF	The port is operating in half-duplex mode.
	Green	The port is operating in full-duplex mode.
Mode - ACT	OFF	There is no activity on the port.
	Flashing Green	There is activity on the port. It is transmitting and/or receiving data.

AT-8624PoE switch Link and Mode LEDs

LED	State	Description
L/A Status (Top LED)	OFF	There is no link between the port and the end-node.
	Green	The port is operating at 100 Mbps.
	Flashing Green	There is activity on the port. It is transmitting and/or receiving data at 100 Mbps.
	Amber	The port is operating at 10 Mbps.
Mode LEDs (Bottom LED)	OFF	Either DC mode or PoE mode.
	Flashing Amber	There is activity on the port. It is transmitting and/or receiving data at 10 Mbps.
D/C Mode	OFF	There is no link between the port and the end-node.
	Green	The port is operating in full duplex mode.
	Amber	The port is operating in half-duplex mode.
	Flashing Amber	The port is operating in half-duplex mode and data collisions are occurring on the port.
PoE Mode	OFF	There is no powered device detected.
	Green	The end node is a powered device and the port is providing power to it.
	Amber	The port is experiencing a problem providing PoE to the end node.
	Flashing Amber	The port is connected to a powered device but providing power to it would exceed the maximum PoE power budget of the switch.

AT-8648T/2SP switch Link and Mode LEDs

LED	State	Description
LINK	OFF	There is no link between the port and the end-node.
	Green	A valid link has been established between the port and the end-node.
Mode - COL	OFF	No data collisions are occurring on the port.
	Flashing Green	Data collisions are occurring on the port.
Mode - SPD	OFF	The port is operating at 10 Mbps.
	Green	The port is operating at 100 Mbps.
Mode - FDX	OFF	The port is operating in half-duplex mode.
	Green	The port is operating in full-duplex mode.
Mode - ACT	Flashing Green	There is activity on the port
	OFF	There is no activity on the port.

AT-8648T/2SP switch 10/100/1000Base-T and SFP LEDs

LED	State	Description
LINK	OFF	There is no link between the port and the end-node.
	Green	A valid link has been established between the port and the end-node.
Mode - COL	OFF	No data collisions are occurring on the port.
	Flashing Green	Data collisions are occurring on the port.
Mode - SPD	OFF	The port is operating at 10/100 Mbps.
	Green	The port is operating at 1000 Mbps.
Mode - FDX	OFF	The port is operating in half-duplex mode.
	Green	The port is operating in full-duplex mode.
Mode - ACT	Flashing Green	There is activity on the port
	OFF	There is no activity on the port.

AT-A45/xx Series Expansion Module LEDs

LED	State	Description
LINK	Steady green	The port has established a valid link with the end node.
	Flashing green	The port is transmitting and/or receiving data.
Duplex	Steady green	The port is operating in full duplex.
	Steady amber	The port is operating in half duplex.
	Flashing amber	Collisions are occurring on the port.

**AT-A46 Expansion
Module LEDs**

LED	State	Description
LINK 10	Green	The port has established a valid 10 Mbps link with the end node.
LINK 100	Green	The port has established a valid 100 Mbps link with the end node.
Both LINK 10 and LINK 100	Green	The port has established a valid 1000 Mbps link with the end node.
FULL DUPLEX	Green	The port is operating in full duplex.
	OFF	The port is operating in half duplex.
ACTIVITY	Green	The port is transmitting and/or receiving data.

**AT-A47 Expansion
Module LEDs**

LED	State	Description
LINK	Steady green	The port has established a valid 1000 Mbps link with the end node.
ACTIVITY	Flashing green	The port is transmitting and/or receiving data.

**AT-A65 Expansion
Module LEDs**

LED	State	Function
10	Green	The port is operating at 10Mbps.
	Off	The port is not operating at 10Mbps.
100	Green	The port is operating at 100Mbps.
	Off	The port is not operating at 100Mbps.
Both 10 and 100	Green	The port is operating at 1000Mbps.
FDX	Green	The port is operating in full duplex mode.
	Off	The port is operating in half duplex mode.
ACT	Flashing green	There is data activity on the port.
	Off	There is no data activity on the port.

Expansion Options

Expansion modules increase switching capacity by providing two extra ports and by allowing switches to be linked together in stacks. Use only the modules in the following table.

Expansion Module	Port Type	Connector Type
AT-A45/MT	100Base-FX	MT-RJ
AT-A45/5C	100Base-FX	SC
AT-A45/5C-SM15	100Base-FX	SC
AT-A46	10/100/1000BASE-T	RJ-45
AT-A47	1000Base-T (GBIC)	GBICs are sold separately.
AT-A65	1000Base-X SFP expansion bay, or 10/100/1000Base-T copper port	SFPs are sold separately. Copper port takes an RJ-45 connection.

For a current list of expansion modules or more information, contact your authorised Allied Telesis distributor or reseller. You can also see these documents:

- *AT-A65 Expansion Module Installation and Safety Guide* for the AT-A65 module only
- *AT-A45/xx Series, AT-A46, and AT-A47 Expansion Modules Installation Guide* for the other expansion modules available for AT-8600 Series switches.

You can download these documents and updates from www.alliedtelesis.com/support/software.

You need Adobe® Acrobat® Reader® software to view, search, or print these documents. You can download it from www.adobe.com.

Adding and Removing Expansion Modules

Hot-swapping expansion modules is possible on AT-8624PoE and AT-8624T/2M switches. If a module is inserted or removed while the switch is powered on, the Fault LED flashes 7 times. You must restart the switch to turn off the flashing LED, and make a module ready for operation. Until the switch is restarted, the output of the **show system** and **show switch port** commands cannot reflect the newly inserted or removed expansion module.

Switch Start-Up

When the switch starts up following a power cycle or an operator-initiated reboot (using the reset button or **restart** command), it performs a series of tests and sends messages to the terminal or PC connected to the ASYN0 port. After the switch successfully starts, a prompt is displayed for you to log in. Refer to the Installation and Safety Guide for basic login instructions or to the *Getting Started* chapter in the Software Reference.

Process flow When the switch starts, it performs the following operations.

Stage	This happens...	Done by...
1	Self-tests run that check basic operations.	Boot ROM
2	A prompt is displayed briefly to allow a user-override. Users can change the startup process by pressing special keys (see Overrides). If they enter nothing, the process continues.	Boot ROM
3	The flash boot release is loaded as the install software.	Boot ROM
4	Install information is checked and the switch boots up from either the preferred or default install.	Boot ROM
5	The startup configuration script that the user specified is executed.	Preferred or default software
6	Startup is complete and the switch starts switching traffic if devices connected to it are sending traffic.	Release software

Overrides The switch pauses briefly during routine startup messages to display the following prompt:

```
Force EPROM download (Y)?
```

If you do nothing, switch software is loaded along with a preconfigured startup script. For troubleshooting, change the process by using the following keys.

Pressing this key...	Forces the switch to...
Y	Load the flash boot release with no patch.
S	Start with the default configuration so that any boot script is ignored.
Ctrl+D	Enter diagnostics mode.

Regular output The following messages are an example of output from the switch.

```

INFO: Self tests beginning.
INFO: RAM test beginning.
PASS: RAM test, 32768k bytes found.
INFO: Self tests complete.
INFO: Downloading switch software.
Force EPROM download (Y) ?
INFO: Initial download successful.

INFO: Initialising Flash File System.

INFO: IGMP packet trapping is active for IGMP snooping, L3FILT
is activated
INFO: Executing configuration script <flash:boot.cfg>
INFO: Switch startup complete

login:

```

Types of messages The following table explains the types of messages that the switch generates during initial startup.

Type	Description
INFO	An action has been taken by the system.
PASS	A test has been completed successfully.
ERROR	An error message that a test has failed but the system continues to operate.
FAIL	An error message that a fatal error condition has caused the system to halt in an unrecoverable fashion.

AlliedWare messages The following table explains messages in the output from the switch.

Message	Description
INFO: Self tests beginning.	Code loader tests are about to begin.
INFO: RAM tests beginning	RAM tests are about to begin.
PASS: RAM test, 131072k bytes found	RAM test passed and the switch is using the indicated amount of memory.
ERROR: RAM test <i>test-number</i> . Error address = <i>address</i> For example: ERROR: RAM test 5. Error address = 00345678	The given RAM test failed at the given address, which means the memory system is faulty. The test repeats until it passes. If the error continues, contact your authorised distributor or reseller.
INFO: BBR tests beginning	BBR battery tests are about to begin.
PASS: BBR test. Battery OK	BBR battery tests passed.
ERROR: BBR Battery low	BBR battery test failed, indicating that the battery is running low. The BBR battery must be replaced. Contact your authorised Allied Telesis distributor or reseller.
PASS: BBR test, 512k bytes found	BBR size/location test passed with the indicated amount of BBR found.

Message	Description (Continued)
FAIL: BBR test. Error address = <i>location</i>	BBR size/location test failed at the given location. The test at this location failed, indicating the end of memory, but a valid location was discovered in the 255 long words following this location. The BBR system must be replaced. Contact your authorised distributor or reseller.
FAIL: BBR test, only 16k bytes found	The BBR size/location test completed, but only the displayed amount of memory was found. This amount is less than the minimum required to run the switch software.
INFO: Self tests complete	Startup tests have finished.
INFO: Downloading switch software	The process of downloading the switch software and vector table from ROM is about to begin.
ERROR: Code load retried FAIL: Code load failed	Loading code from ROM to RAM failed. The load is retried a number of times, and the error message is displayed each time it fails. The fail message is displayed if the switch reaches the maximum number of attempts.
Force EPROM download (Y) ?	Prompt that lets you override the standard startup sequence, typically when troubleshooting.
INFO: Initial download succeeded	Startup tests and download are complete, and the switch software is about to be started. The release is now decompressed. This may take a few seconds.
INFO: Downloading compressed release. This may take up to 1 minute...	The main switch software is decompressed before being loaded into RAM.
INFO: Loading software into memory. This may take up to 1 minute...	
INFO: Executing configuration script <script-name>	Configuration commands in the given script file begin executing if selected by the user. If the script has an error, appropriate error messages are displayed.
INFO: Switch startup complete	The startup process is complete and the switch is ready. If devices connected to it are sending traffic, then the switch begins switching operations.

Ports


This section explains pin assignments for the following:

- [RS-232 Terminal Port \(ASYN0\)](#)
- [RJ-45 Ports](#)

RS-232 Terminal Port (ASYN0)

The RS-232 ASYN0 port connects the switch to a management device for initial configuration. This port allows the software on the switch to be accessed from a terminal or a PC running terminal emulation software.

The ASYN0 port has an RJ-45 socket with an industry recognised pinout. This requires using a straight-through RJ-45 cable with an RJ-45 DB9 connector when the switch is connected to a terminal or PC. The socket is wired as a DTE and the pin layout is shown in the following figure and table.

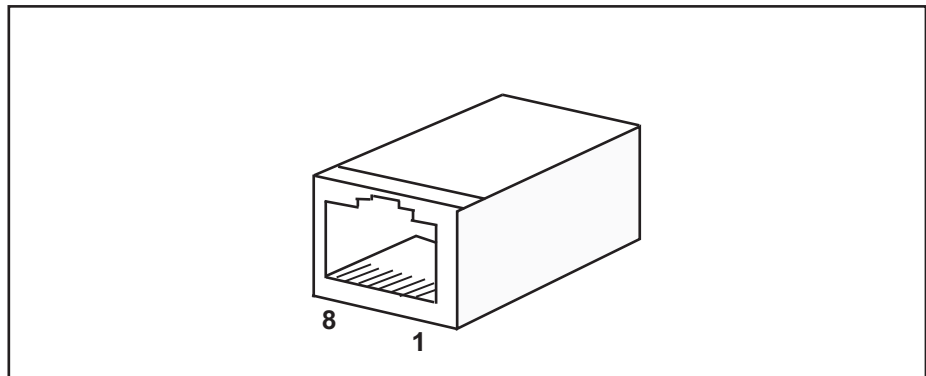


Pin	Role
1	RTS
2	DTR (DSR and DTR are connected but have no other internal connection)
3	TXD
4	GND
5	GND
6	RXD
7	DSR (DTR and DSR are connected but have no other internal connection)
8	CTS

See [“Terminal and Modem Cables” on page 19](#) for more information on connection options for the RS-232 terminal port.

RJ-45 Ports

For 10BASE-T/100BASE-TX connections, a twisted pair cable must be used. Each pair is identified by two different colours. For example, one wire might be red, and the other red with a white stripe. An RJ-45 connector must be fitted to both ends of the cable. The following figure shows the pin layout for RJ-45 connectors.

Figure 4: RJ-45 pin layout

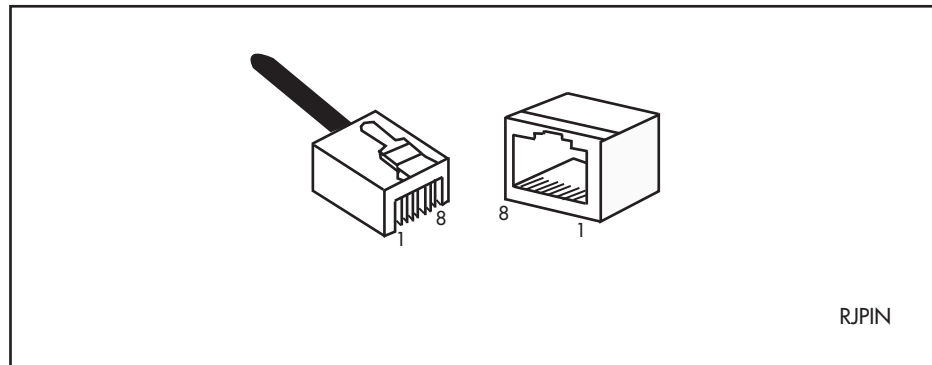

With 10BASE-T/100BASE-TX cables, pins 1 and 2 are used for transmitting data, while pins 3 and 6 are used for receiving data. The following table lists the RJ-45 Pin assignments.

Pin Number	Assignment ¹
1	TX+
2	TX-
3	RX+
6	RX-

1. The “+” and “-” signs represent the polarity of the wires that make up each wire pair.

If a twisted pair cable is to join two ports and only one of the ports has an internal crossover, the two pairs must be straight through, as listed in the following table.

End 1	End 2
1 (TX+)	1 (TX+)
2 (TX-)	2 (TX-)
3 (RX+)	3 (RX+)
6 (RX-)	6 (RX-)

If a twisted pair cable is used to join two ports and either both ports are labelled with an “X” or neither port is labelled with an “X”, a crossover must be included in the wiring. The following table lists the RJ-45 crossover wiring pin assignments.

End 1	End 2
1 (TX+)	3 (TX+)
2 (TX-)	6 (TX-)
3 (RX+)	1 (RX+)
6 (RX-)	2 (RX-)

For 1000BASE-T RJ-45 cables, all four pairs are used and the cable is wired in a straight-through configuration. The following table lists the pin assignments.

End 1	End 2
1 Pair 1+	1 Pair 1+
2 Pair 1-	2 Pair 1-
3 Pair 2+	3 Pair 2+
6 Pair 2-	6 Pair 2-
4 Pair 3+	4 Pair 3+
5 Pair 3-	5 Pair 3-
7 Pair 4+	7 Pair 4+
8 Pair 4-	8 Pair 4-



Caution Do not plug a phone jack into any RJ-45 port. Doing so could damage the switch. Use only twisted pair cables with RJ-45 connectors.

Redundant Power Supply (RPS)

AT-8600 Series switches have a Redundant Power Supply (RPS) connector on their rear panel. The RPS connector differs for different switch models.

For information about the RPS for AT-8624T/2M and AT-8648T/2SP switches, [Figure 5](#) illustrates the pin layout to the 16-pin molex connector and RPS port. [Table 1](#) lists the connector's pin numbers and pin functions.

For information about the RPS for the AT-8624PoE switch, [Table 2 on page 18](#) lists the connector's pin numbers and pin functions.

Figure 5: RPS 16-pin molex connector pin layout for AT-8624T/2M and AT-8648T/2SP

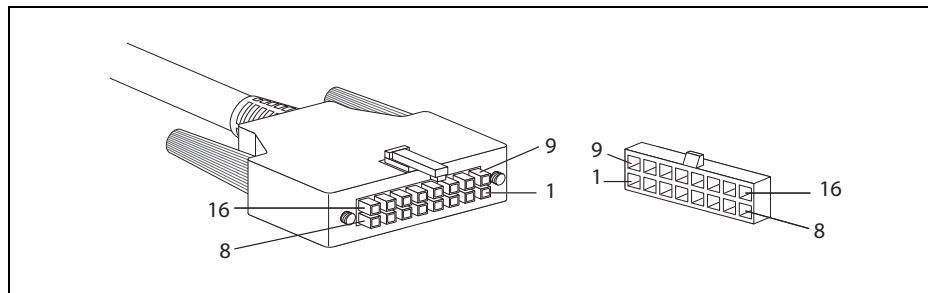


Table 1: RPS connector pin numbers and functions for AT-8624T/2M and AT-8648T/2SP

Pin Number	Function
1	+12 VDC
2	Remote Sense (RS) +5 VDC
3	Remote Sense (RS) Ground
4	Remote Sense (RS) +3.3 VDC
5	Redundant Power Supply (RPS) Present
6	Ground (+3.3 VDC Return)
7	Ground (+5 VDC Return)
8	+5 VDC
9	Ground (+12 VDC Return)
10	+3.3 VDC

Table 1: RPS connector pin numbers and functions for AT-8624T/2M and AT-8648T/2SP

Pin Number	Function
11	Ground (+3.3 VDC Return)
12	+3.3 VDC
13	Ground (+3.3 VDC Return)
14	+3.3 VDC
15	+5 VDC
16	Ground (+5 VDC Return)

AT-8624PoE pin layout For the AT-8624 PoE switch, the pin layout is different. The molex connector has 15 power pins, plus 2 high current pins. The pin layout is as follows.

For the female unit connector:

- The top row contains 7 pins. Pins are numbered 1-7, from right to left.
- The bottom row contains 8 pins. Pins are numbered 8-15, from right to left.
- On the left of the connector is the A2 pin.
- On the right of the connector is the A1 pin.

For the male cable connector:

- The top row contains 7 pins. Pins are numbered 1-7, from left to right.
- The bottom row contains 8 pins. Pins are numbered 8-15, from left to right.
- On the right of the connector is the A2 pin.
- On the left of the connector is the A1 pin.

Table 2: RPS Connector Pin Numbers and Functions for AT-8624PoE.


Pin Number	Function
1	48V
2	48V Remote Sense
3	Redundant Power Supply (RPS) Present
4	12V Remote Sense Return
5	12V Remote Sense
6	+12V
7	+3v3
8	48V
9	48V
10	48V Remote Sense Return
11	Redundant Power Supply (RPS) OK
12	+3v3 Remote Sense Return
13	+3v3 Remote Sense
14	+3v3
15	+3v3
A1	Isolated Ground
A2	Ground

Cables


This section describes how to make cables for connecting switch interfaces to networks, terminals, and printers.

Terminal and Modem Cables

The following figure shows how to wire cables to connect a standard VT100 compatible terminal, or a modem, to the switch's RS-232 Terminal Port.

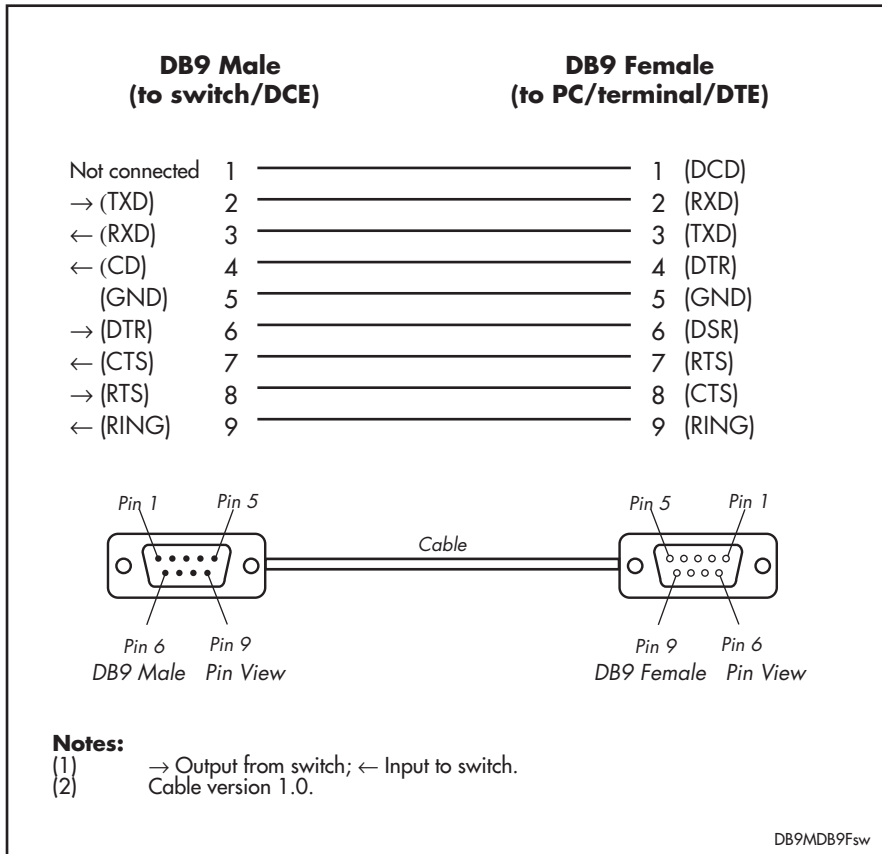

The following figure shows the pin wiring diagram for a DCE RS-232 Terminal Port (DB9 female connector) male to male modem cable

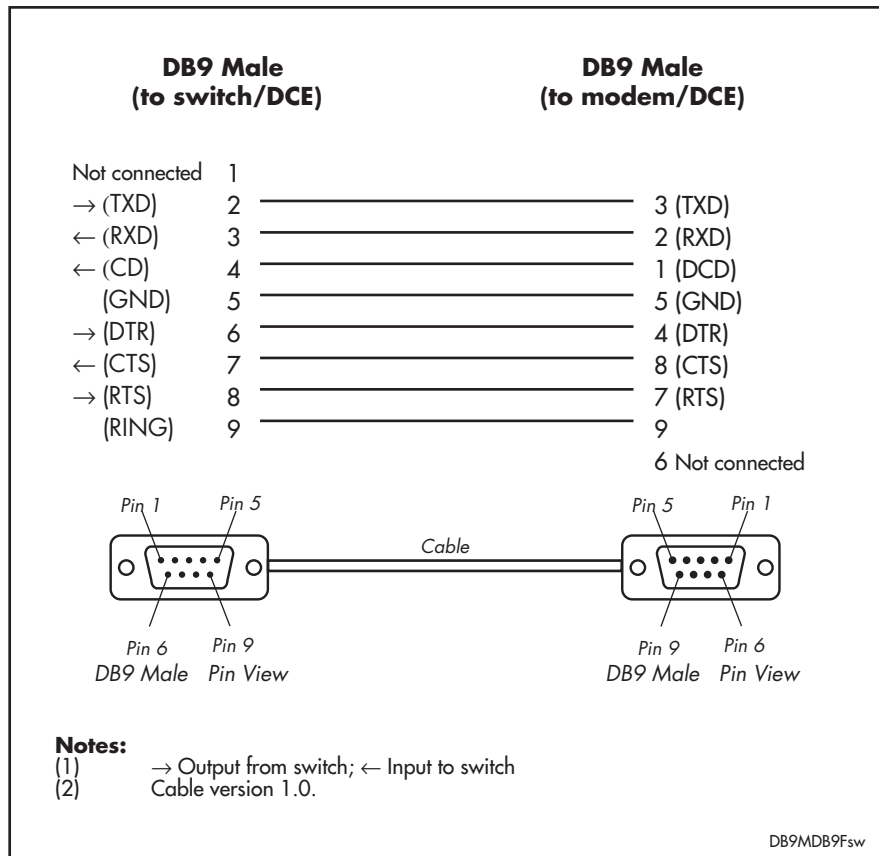

The switch's RS-232 terminal port has a DCE female socket so that you can use a straight-through cable when connecting the switch to a terminal or PC. However, output from the **show asyn** command still has a DTE perspective. The internal DTE pin roles are listed in the following table.

Pin	Role
2	TXD
3	RXD
4	CD
5	GND
6	DTR
7	CTS
8	RTS

Cable Guidelines

The following table lists port, connector, and cable combinations for each model.


Model	Port Type(s)	Connector Type(s)	Cable Type ¹	Maximum Cable Length
AT-8624T/2M, AT-8624PoE	10BASE-T/100BASE-TX	RJ-45	10BASE-T Category 3 or better 100BASE-TX Category 5 or better	100m (328ft)
AT-8648T/2SP	10BASE-T/100BASE-TX	RJ-45	10BASE-T Category 3 or better 100BASE-TX Category 5 or better	100m (328ft)
	10/100/1000BASE-T	RJ-45	1000BASE-T Category 5e, or better	100m (328ft)
	SFP	RJ-45 Fibre	1000BASE-T Category 5e, or better Fibre Cable	100m (328ft) Dependent on SFP type

1. Refer to the IEEE 802.3 standards for further cable information

Using AT-TFTP Server

This section explains how to access and use the AT-TFTP Server. You can transfer configuration files as well as download software upgrades with AT-TFTP Server.

1. If AT-TFTP Server has not been installed, install it from the Documentation and Tools CD-ROM.
Select AT-TFTP Server from the Start > Programs > Allied Telesis > AT-TFTP Server menu.
2. To set preferences for the AT-TFTP Server, select Options from the File menu to display the Set Preferences dialog box shown below.

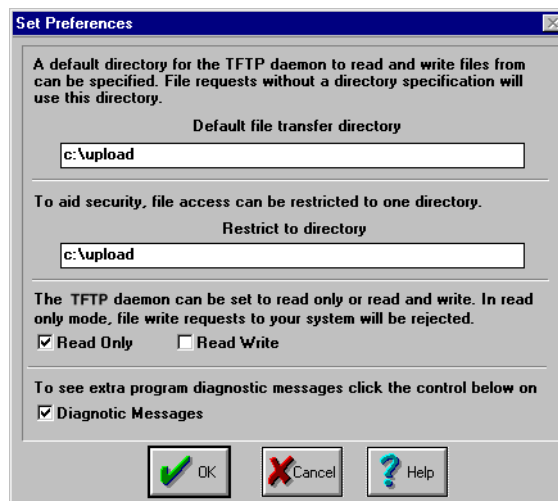

The "Default file transfer directory" field specifies the directory that AT-TFTP Server reads from or writes to for file requests that do not include a directory specification.

Enter a path name in the "Restrict to directory" field to prevent unauthorised access to private directories. AT-TFTP Server uses the specified directory even when file requests contain references to other directories.

To prevent files from being written to the PC, click the Read only checkbox.

To use the PC to archive scripts created using the switch's **create config** command, click the Read Write checkbox.

Click the OK button when you finish.

3. To load a file from AT-TFTP Server to the switch, type the following command on a terminal connected to the RS-232 Terminal Port (ASYN0):

```
load method=tftp file=filename server=ipadd dest=flash
```

where *filename* is the name of the file to download and *ipadd* is the IP address of the PC running AT-TFTP Server.

4. To save a TFTP Server log, select **Save As** from the File menu. TFTP requests are logged to the AT-TFTP Server main window.

Using Windows Terminal and Hyperterminal

You can use a PC running terminal emulation software as the manager console, instead of a terminal. There are many terminal emulation applications available for PCs, but the most readily available are the Terminal and HyperTerminal applications included in Microsoft Windows 98, 2000, and XP Professional. In standard Windows installations, HyperTerminal is available from the Communications submenu.

The key to successful use of terminal emulation software with the switch is to configure the software and switch with matching communications parameters. The following procedure can be applied to most terminal emulation programs. Dialog boxes in the procedure are from Windows 2000 and XP Professional.

To configure Windows HyperTerminal for 2000 and XP Professional

1. Start the program in Windows by doing one of the following:
 - Select Programs > Accessories > Communications > HyperTerminal.
 - Double-click the Hypertrm.exe icon.


2. In the Connection Description dialog box:
 - Enter a name for the connection, such as Admin.
 - Select an icon from the scrollable list and click the OK button.




3. In the "Connect using" field on the Connect To dialog box, select the COM port on the PC used to connect to the switch. and click the OK button.



- In the COM n Properties dialog box, set port parameters as follows, and click the OK button.

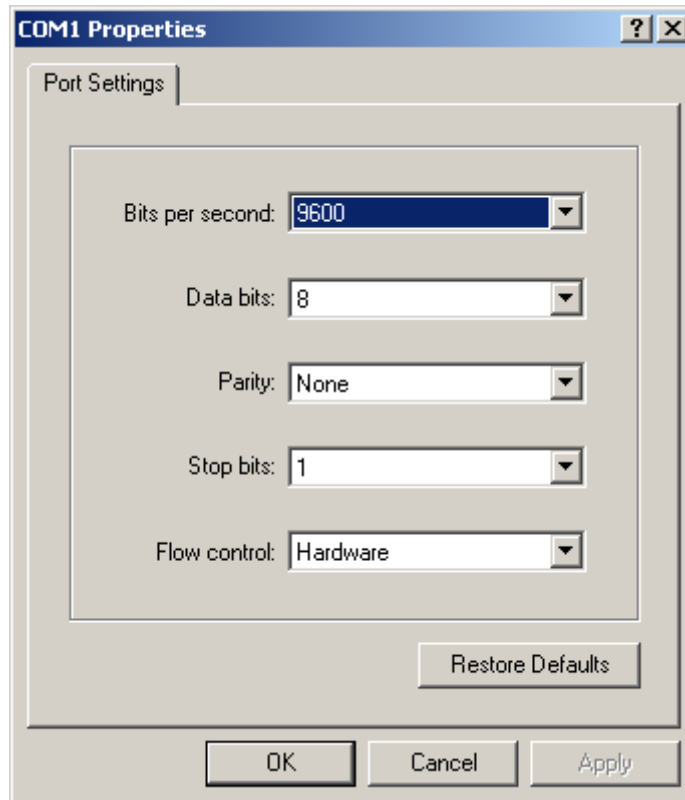


- From the main HyperTerminal window, select Properties from the File menu. Click the Settings tab, and set the Properties dialog box as follows.

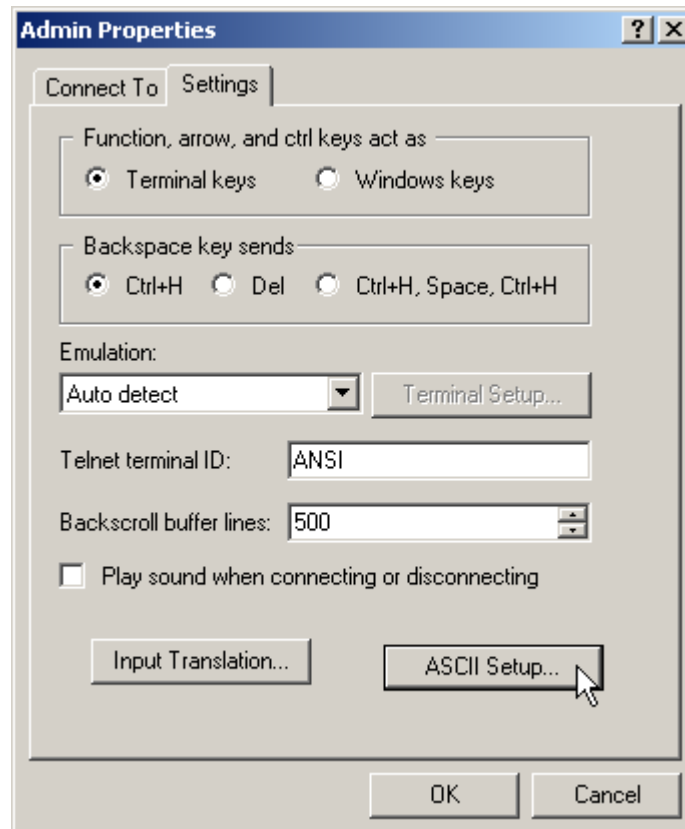

6. Click ASCII Setup to display the ASCII Setup dialog box, and ensure the following options are **not** selected:
 - Echo typed characters locally
 - Append line feeds to incoming line ends

Set other parameters as necessary and click the OK buttons on both dialog boxes to close them.

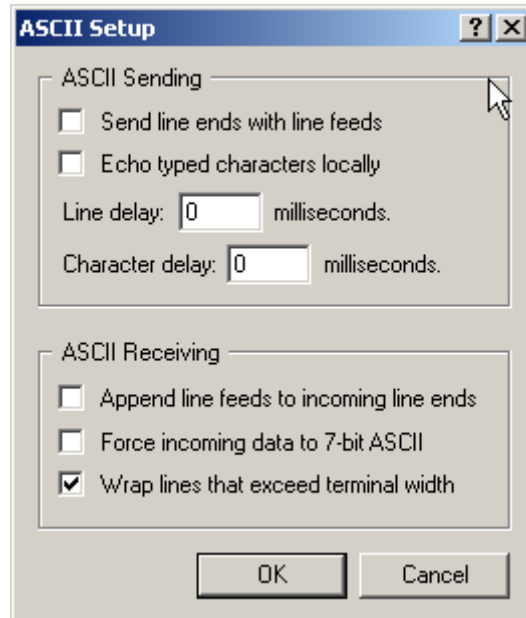

7. Save the current session by selecting Save from the File menu on the main HyperTerminal window. This creates a connection icon with the name you assigned in the HyperTerminal group.

To use the configuration, double-click the connection icon. When the HyperTerminal window appears, press the Enter key several times; the switch's login prompt is then displayed.

Test Facility

The Test Facility is designed to test the switch's physical interfaces. Testing should not be performed while the switch is operational as the presence of a loopback plug may cause feedback of network traffic. Also, any interfaces being tested are dedicated to the Test Facility. The Test Facility can be thought of as a specialised interface module like PPP or Frame Relay.

The Test Facility is built into all AT-8600 Series software. For detailed information on operating the Test Facility, see the *Test Facility* chapter of the *AT-8600 Series Software Reference*.

10/100 Ethernet LAN Port Tests

A loopback plug is required to run the first part of the Ethernet LAN test. See [“Testing Switch Interfaces” on page 27](#) for details of how to make a loopback plug. To start an Ethernet interface test, use the command:

```
enable test int=portn
```

where *n* is the Ethernet interface number. The test runs about 4 minutes. You can use the following command to display the test progress and results:

Display test results with the command:

```
show test
```

The following figure shows example output from the this command.

Figure 6: Example output from the **show test** command

Board	ID	Bay	Board Name	Rev	Serial number	
Base	238		AT-8624T/2M	M1-1	12345678912345	
Uplink	88	1	AT-A46	P1-0	98765432198765	
Interface	State	Result	Type	Duration (minutes)	Details Data(%OK)	Control
port1	no test	-	-	-	-	-
port2	no test	-	-	-	-	-
port3	no test	-	-	-	-	-
port4	no test	-	-	-	-	-
port5	no test	-	-	-	-	-
port6	no test	-	-	-	-	-
port7	no test	-	-	-	-	-
port8	no test	-	-	-	-	-
port9	no test	-	-	-	-	-
port10	no test	-	-	-	-	-
port11	no test	-	-	-	-	-
port12	no test	-	-	-	-	-
port13	no test	-	-	-	-	-
port14	no test	-	-	-	-	-
port15	no test	-	-	-	-	-
port16	no test	-	-	-	-	-
port17	no test	-	-	-	-	-
port18	no test	-	-	-	-	-
port19	no test	-	-	-	-	-
port20	no test	-	-	-	-	-
port21	no test	-	-	-	-	-
port22	no test	-	-	-	-	-
port23	no test	-	-	-	-	-
port24	no test	-	-	-	-	-
port26	no test	-	-	-	-	-
asyn0	no test	-	-	-	-	-


Testing Switch Interfaces

Loopback plugs are used in conjunction with Test Facility software to test the physical interfaces on the switch (see the section “[Test Facility](#)” on page 25 of this Reference, and the *Test Facility* chapter of the *AT-8600 Series Software Reference*). The purpose of a loopback plug is to connect the output pins on the interface to the input pins so that any data transmitted over the interface is looped back and received at the same interface.

Gigabit copper interfaces (as found on the AT-A39/T expansion module, and the AT-8648T/2SP) cannot be looped back. Loopback plugs can only be used in conjunction with 10/100 Ethernet interfaces.

On interfaces with control signals, these are also looped back. The data received on the interface is compared with the data transmitted to determine whether or not the interface is functioning correctly. In order to produce a comprehensive test report for the interface being tested, most tests performed by the Test Facility require a loopback plug to be inserted.

Figure 7: Ethernet twisted pair (TP) loopback plug

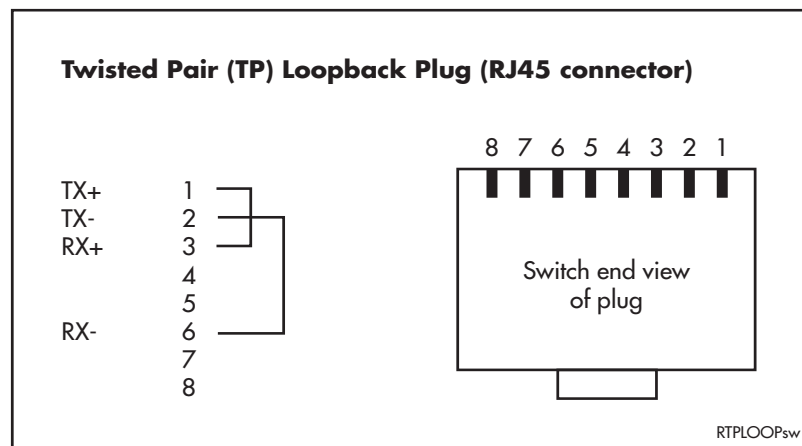

Troubleshooting

Basic problems

To eliminate some basic problems:

1. Make sure the power cord is securely connected.
2. Check that the power supply voltage is stable.
3. Check that the correct data cables are being used and that their connections are secure.
4. Make sure that other network devices are working properly.
5. Use the **show install** command to check that the latest software release is loaded. See the *AT-8600 Series Software Reference* for more information about obtaining the latest software release.
6. If the switch is malfunctioning, reboot it by entering the **restart reboot** command. Alternatively, power OFF and ON the switch by disconnecting and reconnecting the main power supply (including, if connected, the RPS power).

Common Problems and Solutions

Power LED is off If the power LED is off, it may indicate the following:

- a loose power cord
- a power supply failure

Perform the following steps in sequence:

1. Check that the power cord connections are secure.
2. Check that all switches and circuit protection devices are in the ON position.
3. Ensure that the supply voltage is within the operational range (110/240 VAC 50/60 Hz).

L/A LED on a port is off If the Link/ Activity LED is off, it may indicate the following:

- a loose data cable
- the device at the other end of the connection is not working properly or is turned off
- the data cable is not wired correctly
- the network administrator has manually disabled the port through the software
- the port's selected transmission mode does not match that of the attached device

Perform the following steps in sequence:

1. Make sure the data cable connections are secure.
2. Make sure the device at the other end of the connection is switched on and working properly.
3. Check that the data cable is wired correctly.
4. If you can, log in and check the port status. Refer to the Installation and Safety Guide for basic login instructions or to the *Getting Started* chapter in the Software Reference.
5. If the port is enabled, make sure the transmission speed matches that of the connected device (auto-negotiating, full or half-duplex).

If the port is disabled, someone has used the software to manually disable it. You should find out why the port was disabled before enabling it.

Fault LED is on If the fault LED is on, it may indicate the following:

- there is a problem with the switch or RPS PSU
- the switch or management software is malfunctioning
- a hardware fault is preventing switch start-up

Perform the following steps in sequence:

1. Check "[System LEDs](#)" on [page 7](#) for descriptions and explanations of LED flashing sequences.
2. Restart the switch by entering the RESTART REBOOT command.
3. If you were attempting to download software or manage the switch via the RS-232 terminal Port, check that connections between the Terminal Port and local terminal or PC are secure.

If you cannot access the switch's software because of a faulty RS-232 Terminal Port connection, you can still manage the switch via Telnet or SNMP until the problem is fixed.

4. Unplug the switch and then plug it in again. If an RPS unit is present, you will also have to disconnect and reconnect the RPS unit.
5. Download the latest software release. See the *AT-8600 Series Software Reference* for more information on how to obtain the latest software release.

- Additional resources**
- www.alliedtelesis.com/support/software
 - the *AT-8600 Series Software Reference*
 - How To notes from the Resource Center on your Documentation and Tools CD-ROM, or from www.alliedtelesis.co.uk/en-gb/solutions/techdocs.asp

For More Information

Document sets The complete document set for the AT-8600 Series switches includes:

- The *AT-8600 Series Installation and Safety Guide*, which provides safety and statutory information, and outlines the procedure for installing switch units.
- This *AT-8600 Series Switch Hardware Reference*.
- The *AT-8600 Series Software Reference*, which provides detailed information on configuring the switch and its software.
- The *AT-A65 Expansion Modules Installation and Safety Guide*, which outlines the procedure for installing the AT-A65 expansion module and provides technical specifications for the module.
- The *AT-A45/xx Series, AT-A46, and AT-A47 Expansion Modules Installation Guide*, which outlines the procedure for installing these expansion modules, and provides technical specifications for the modules.
- AT-TFTP Server for Windows, for downloading software releases.
- Adobe Acrobat Reader, for viewing online documentation.

These documents can also be downloaded from www.alliedtelesis.com/support/software.

You need Adobe® Acrobat® Reader® software to view, search, or print these documents. You can download it from www.adobe.com.

Viewing documentation on the CD

If your switch shipped with a Documentation and Tools CD-ROM, use the following steps to view the documentation:

1. Insert the Documentation and Tools CD in the CD-ROM drive.
If the browser menu does not appear, select Run from the Start menu. Then type `d:\start.exe` (where d: is the CD-ROM drive) in the text box, and click the OK button.
2. Install Adobe Acrobat Reader from the CD if necessary. It must be installed in order to view the documentation.
3. To view a specific document, click the document title.

4. To browse PDF documents, use any of the following to page through a document:
 - toolbar buttons, such as the Next Page button
 - keyboard shortcuts, such as arrow keys
 - commands from the Document menu
 - mouse wheel

To go to a specific section or topic, click a bookmark, thumbnail, or hypertext link.

Use the Search command to search for keywords or phrases.

For more information about using the Adobe Acrobat Reader, select Adobe Reader Help from the Help menu.

5. To install one of the tools from the CD, click the link on the browser menu.

Contacting us With locations covering all of the established markets in North America, Latin America, Europe, Asia, and the Pacific, Allied Telesis provides localized sales and technical support worldwide. To find our representative nearest you, visit Allied Telesis on the web at: www.alliedtelesis.com.